

PASSENGER-SIDE FRONT OR REAR PORTED SUBWOOFER ENCLOSURE

INSTALLATION

DF11-USP10

DEFENDER HD11



2026 Can-Am® Defender HD11



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

WARRANTY DISCLAIMER

SSV Works offers a warranty on all products manufactured by SSV Works, covering defects in material or workmanship. For Kicker products included with SSV Works systems, SSV Works handles all warranty claims directly, eliminating the need to contact Kicker separately. Warranty coverage is as follows:

- Enclosures/Panels (SSV Works): Limited Lifetime Warranty
- SSV Works Speakers and Subwoofers: Limited Lifetime Warranty
- Kicker Speakers: Limited 3-Year Warranty
- Kicker Subwoofers: Limited 1-Year Warranty
- SSV Works Amplifiers: Limited 2-Year Warranty
- Kicker Amplifiers: Limited 2-Year Warranty
- SWITCH Works Products: Limited 3-Year Warranty

This warranty does not cover damage caused by misuse, improper installation, or unauthorized modifications. For warranty claims, please contact SSV Works directly for assistance.

PASSENGER-SIDE FRONT OR REAR PORTED SUBWOOFER ENCLOSURE

PARTS LIST



DF-USP10

Pod, Subwoofer, All Locations, Ported, Defender



B-V102

10" Subwoofer, 2 ohm



B-S1560

Screw, Sheet Metal, PHPS, #4 X .50", SUS304, Black Oxide



B-H2703

Subwoofer Harness, 2-Wire, 14 AWG W/ Molded Grommet




B-HP#7-8

Hardware Pack, Set of 8 #7x1.25" screws



B-G2949

2MM, SUB Enclosure, Subwoofer Gasket, Universal

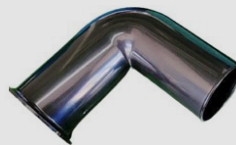

B-PT3607

Single Port Tube, 70mm Dia x 275mm Long



B-S1656

#7-19 x 3/4", SUS 304, Black Oxide, Phil Pan-Head (X4) "USED TO INSTAL PORT TUBE TO SUB BOX"



B-MBP3999

Bracket Pack, Defender, HD11, Sub Enclosure



B-HPM616-6

Hardware pack, set of 6 M6x16 screws and washers, x2



B-HP4004

Hardware Pack, 2x U-nut Clip, 2x 19mm O.D. Washers

TOOLS NEEDED

- T30 Torx



PASSENGER-SIDE FRONT OR REAR PORTED SUBWOOFER ENCLOSURE

VEHICLE DISASSEMBLY



If equipped, remove the storage container by lifting it up and out.

NOTE! Whether, installing under the front or rear passenger side seat, installation is the same.




Using a T30 Torx bit, remove the rear bolt in the running board.

PRODUCT ASSEMBLY




Locate bracket C. Using Two (2) T30 Torx bolts and washers, mount the bracket underneath the enclosure port on the side of the enclosure.

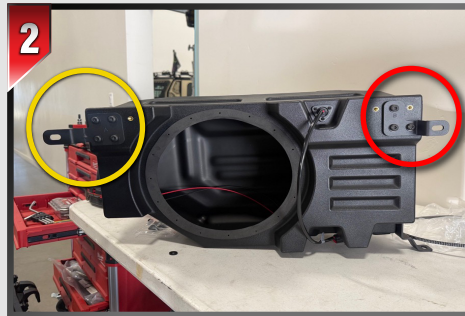

Locate bracket A and bracket B. With the sub box facing you, mount bracket A on the left side of the sub (circled in YELLOW) and bracket B on the right side of the sub (circled in RED). Match the mounting pattern as shown in the image.

INSTALLATION

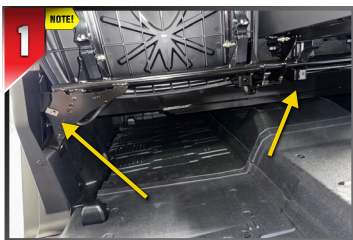


Place the Two (2) included U-nuts onto the brackets under the seat railing, as indicated here by the YELLOW arrows.

NOTE! The threads on the U-Nut should face toward the REAR of the vehicle.



Place the enclosure into position with the subwoofer facing the rear of the vehicle.

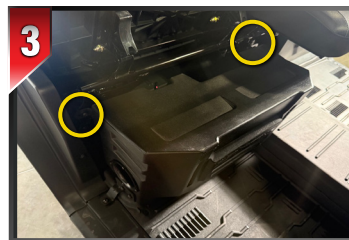

Using the remaining Two (2) T30 Torx bolts, secure the rear brackets to the previously installed U-nuts.



Using the factory T30 Torx bolt you removed previously, secure the final mounting bracket next to the port.

SSVWORKS[®]
THE ORIGINAL UTV AUDIO BRAND™

DEFENDER HD11

PASSENGER-SIDE FRONT OR REAR PORTED SUBWOOFER ENCLOSURE

INSTALLATION



818-991-1778

Support@SSVworks.com

SSV Works Corporate

4610 Calle Quetzal, Camarillo, CA 93012

SSV Works (Location #2)

1212 E Venture Dr. #100, St. George, UT 84790