

**REAR SEAT PORTED SUB BOX**

# INSTALLATION

• 250-XPB-BS10 •

## XPEDITION



**2024-Up Polaris® Xpedition**



*Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.*

## WARRANTY DISCLAIMER

SSV Works offers a warranty on all products manufactured by SSV Works, covering defects in material or workmanship. For Kicker products included with SSV Works systems, SSV Works handles all warranty claims directly, eliminating the need to contact Kicker separately. Warranty coverage is as follows:

- Enclosures/Panels (SSV Works): Limited Lifetime Warranty
- SSV Works Speakers and Subwoofers: Limited Lifetime Warranty
- Kicker Speakers: Limited 3-Year Warranty
- Kicker Subwoofers: Limited 1-Year Warranty
- SSV Works Amplifiers: Limited 2-Year Warranty
- Kicker Amplifiers: Limited 2-Year Warranty
- SWITCH Works Products: Limited 3-Year Warranty

This warranty does not cover damage caused by misuse, improper installation, or unauthorized modifications. For warranty claims, please contact SSV Works directly for assistance.

# ***XPEDITION***

## **REAR-UPPER 6.5" SPEAKER PODS**

### **CONTENTS**

<b>PARTS LIST</b>	<b>1</b>
<b>TOOLS NEEDED</b>	<b>1</b>
<b>DISASSEMBLY - REAR SPEAKER PODS</b>	<b>2</b>
<b>ASSEMBLY</b>	<b>2</b>
<b>INSTALLATION</b>	<b>2</b>

# XPEDITION

## REAR-UPPER 6.5" SPEAKER PODS

### PARTS LIST




**(XPD-DUPS10)**

Pod, Subwoofer, Rear Underseat, Driver Side, Polaris Xpedition



**(B-V102)**

10" Subwoofer, 2 ohm

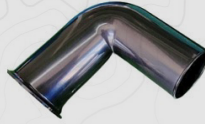

**(B-PT3607)**

Single Port Tube, RZ5, 70mm Dia x 275mm Long



#7-19 x 3/4", SUS 304, Black Oxide, Phil Pan-Head (X4) "USED TO INSTALL PORT TUBE TO SUB BOX"



**(B-S1560)**

Screw, Sheet Metal, PHPS, #4 X .50", SUS304, Black Oxide



**(B-MBP3882)**

Bracket Pack, Pod Subwoofer, Polaris Xpedition



**(B\_HPM616-6)**

Hardware pack, set of 6 M6x16 screws and washers



**(B-HP<616-4C)**

Hardware pack, set of 4 M6x16 screws and washers (2 PACKS)



**(B\_HP#7-8)**

Hardware Pack, Set of 8 #7x1.25" screws

### TOOLS NEEDED


- #4 Allan
- 10mm socket
- T40 Torx




**XPEDITION**  
**REAR-UPPER 6.5" SPEAKER PODS**




1 Lift the rear seat by pulling it up.

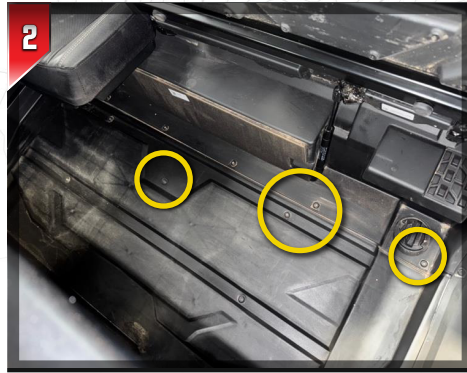


2 Remove the Four (4) T40 Bolts.

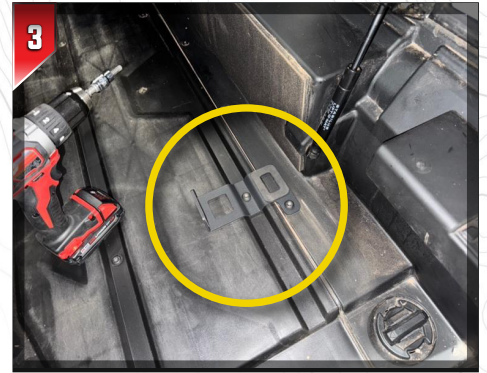

3 Place the first bracket onto the floor board aligned as seen here, and reinsert the Two (2) T40 Bolts.

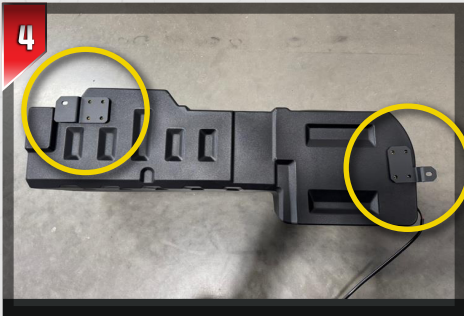

4 Assemble the two (2) remaining brackets onto the subwoofer enclosure using the provided hardware.

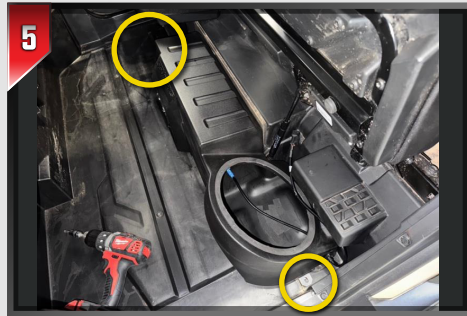

5 Place the subwoofer enclosure into position, insert the remaining two (2) T40 bolts.



6 With the provided hardware, secure the middle mounting bracket to the subwoofer enclosure.

**SSVWORKS**  
THE ORIGINAL UTV AUDIO BRAND™

**XPEDITION**  
**REAR-UPPER 6.5" SPEAKER PODS**  
**INSTALLATION**



**818-991-1778**

**SUPPORT@SSVWORKS.COM**

**SSV WORKS CORPORATE**

**SSV WORKS (LOCATION #2)**

4610 Calle Quetzal, Camarillo, CA 93012

1212 E Venture Dr. #100, St. George, UT 84790

   / SSVworks



**SSVWORKS.COM**