


SWITCH Works TANGO2 Polaris Xpedition Turn Signal Kit Wiring Diagram

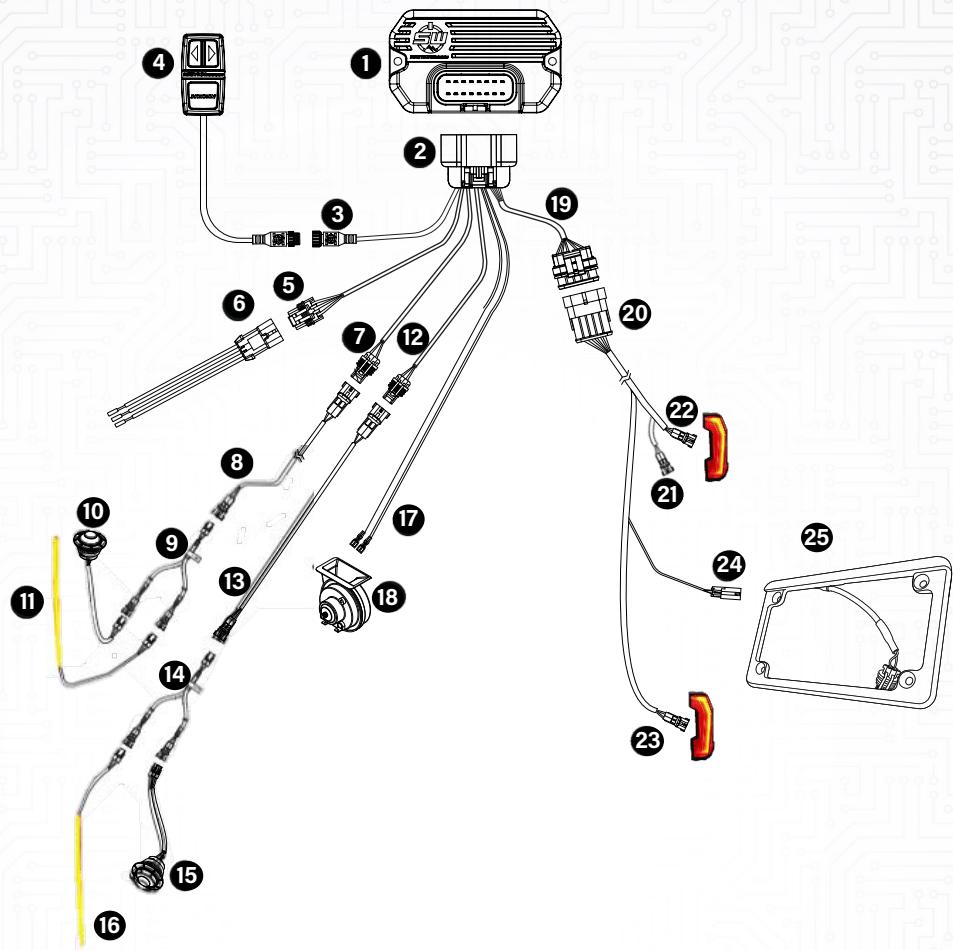

Description		Part #
1	Tango2 Brain	
2	Main Wire Harness	B-H3271
3	Controller Lead	
4	Rocker Switch Controller	
5	Power Input Lead	
6	Power Input Harness for Buss Bar	BO-SS-HPGAT
7	Front Passenger Side Turn-Signal Lead	
8	Front Turn-Signal Lead Extension	B-H2959
9	Front Turn-Signal Lead Y-Splitter	B-H3836
10	Front LED Lamp	B-H2813
11	Front Passenger Sequential LED Strip	B-SW-STS45
12	Front Driver Side Turn-Signal Lead	
13	Front Turn-Signal Lead Extension	B-H2959

Description		Part #
14	Front Turn-Signal Lead Y-Splitter	B-H-3836
15	Front LED Lamp	B-H2813
16	Front Driver Sequential LED Strip	B-SW-STS45
17	Horn Power Lead	
18	Horn with Mounting Bracket	SW-HRN500
19	Taillight Harness Lead	
20	Taillight Harness	250-RZ346-TSH
21	Passenger Side Taillight Connector	
22	OEM Taillight Connector Adapter	
23	Driver Side Taillight Connector	
24	Light Plate Output Lead	
25	License Plate Frame (if included)	240-SWTS-LICPLT

SWITCH Works TANGO2 Polaris Xpedition Turn Signal Kit Wiring Diagram

